

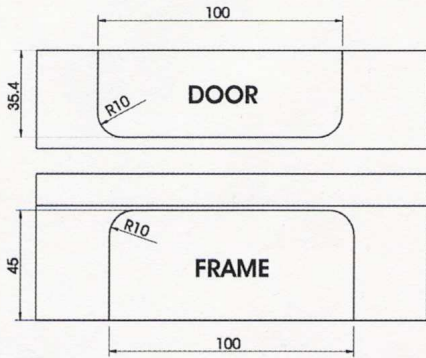
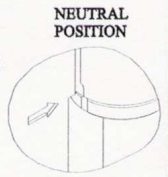


SURE HINGE 3D BUTT HINGE LEFT HAND FITTING INSTRUCTIONS FOR WOODEN DOORS

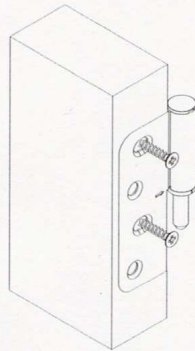


1
ROUTE FRAME & DOOR
WITH $\varnothing 20$ CUTTER

THIS WILL GIVE A
NOMINAL CLEARANCE
OF 2.5mm BETWEEN
FRAME & DOOR

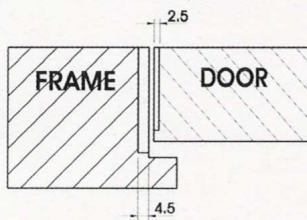


2

PILOT DRILL AT END
OF SLOT 3.5mm, FIX
2 SCREWS
3.5mm

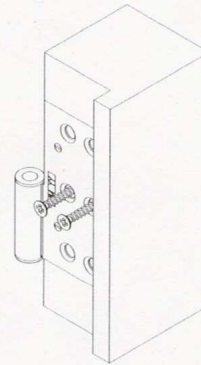


3

PILOT DRILL HOLES
3.5mm, FIX 2 SCREWS

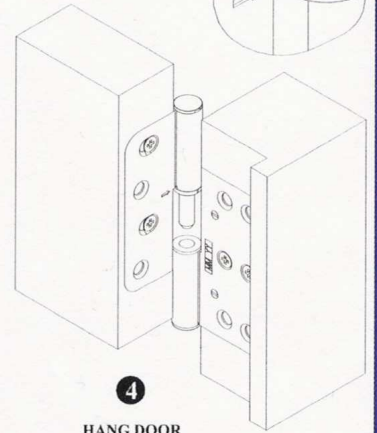



4

HANG DOOR
ON FRAME

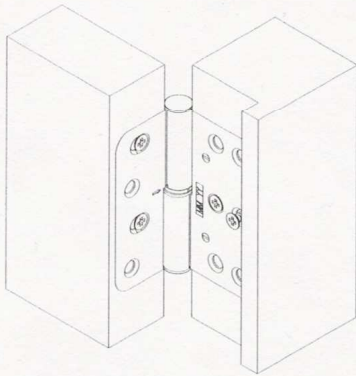


5

SLACKEN / TIGHTEN SCREWS TO GET
PARALLEL CLEARANCE BETWEEN
DOOR & FRAME

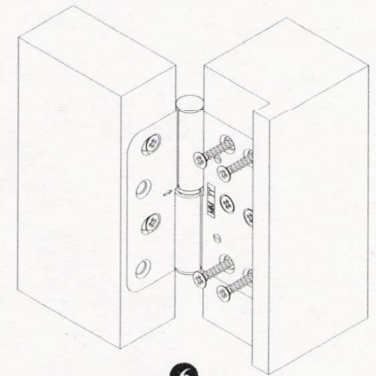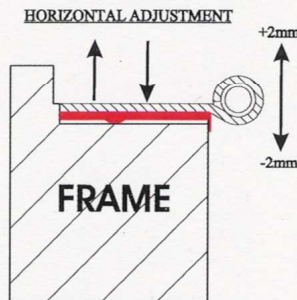


6

PILOT DRILL HOLES
3.5mm, FIX 4 SCREWS

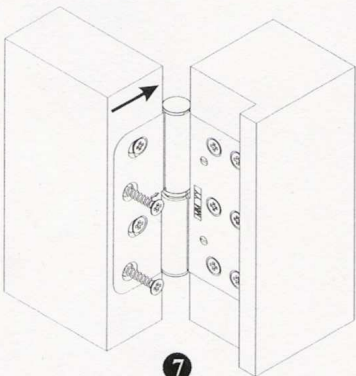


7

SLACKEN 2 SCREWS ADJUST FOR
SEAL PRESSURE - TEST DOOR
IF OK PILOT DRILL 3.5mm & FIX
2 SCREWS

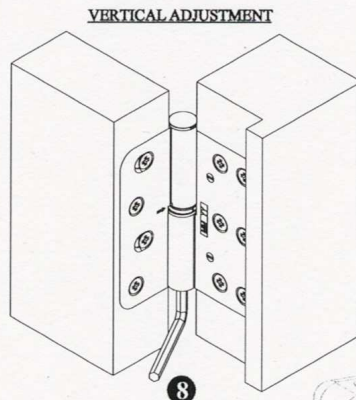

8

REMOVE BOTTOM CAP ADJUST
USING 4mm ALLEN KEY
REFIT CAP

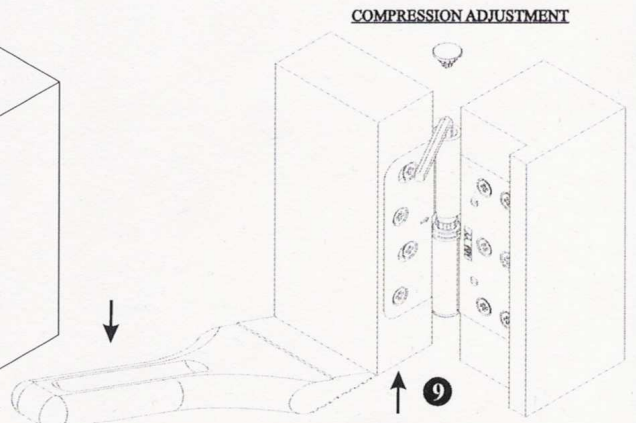

9

REMOVE TOP CAP
LIFT DOOR CLEAR
OF TEETH & ADJUST
USING 4mm ALLEN KEY
LOWER & REFIT CAP

TECHNICAL SERVICE CENTRE
Tel. 0121 224 6002 Fax. 0121 520 8449